

# CIRLOCK


## LOCKOUT / TAGOUT EQUIPMENT

### Universal Valve Lockout - UVL-1

Device can be used with either included Wire Rope or Lockout Arm.

- Push down on Lock Nut and place device in required position using
- Tighten Lock Nut and place padlock to prevent Lock Nut to be turned..

Note: Arm and wire rope can be removed or an additional arm can be attached. First remove Lock Nut then Remove arm/rope and replace Lock Nut.

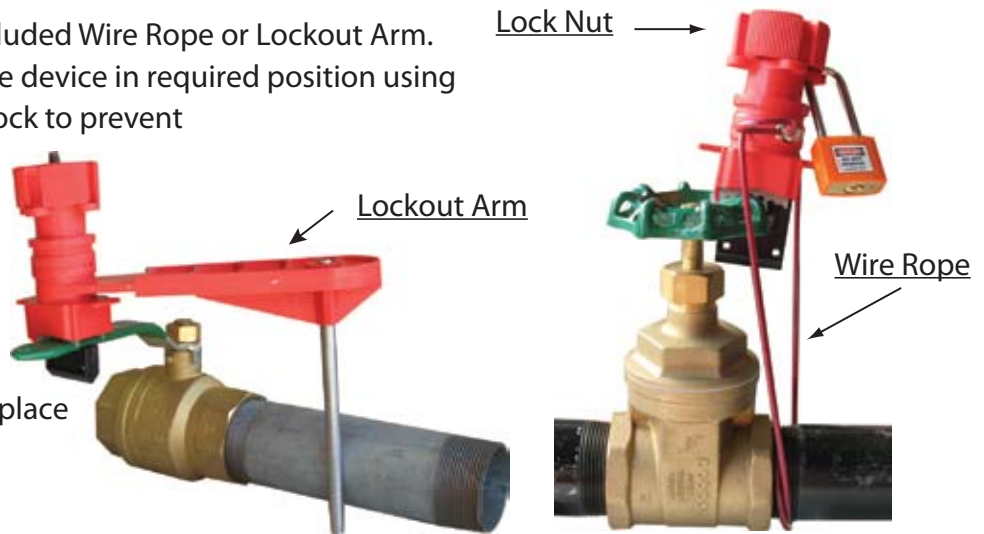

Ensure that device cannot be removed and that access to the valve handle is blocked efficiently so handle cannot be turned. If the device cannot securely hold valve handle in a safe position - IT MUST NOT BE USED.

DISCLAIMER: Appropriate use of these devices are the sole responsibility of the user in relation to health and safety regulations. Before using, user shall determine the suitability of the products for his intended use and user assumes all risk and liability whatsoever in connection therewith. Erik Larsen Pty Ltd/CIRLOCK is not responsible for any loss or damage arising from the use of these products which is beyond Erik Larsen Pty Ltd/CIRLOCK's control, and liability is limited to the replacement of material proven faulty.

[www.cirlock.com.au](http://www.cirlock.com.au)